


QuakeCom Multi-Gateway system for PC

This is for the SOHO business model or home office. You don't have to add or purchase anything. You can organize a maximum 4 channel Gateway system only using 4 NPST-130 or NPST-130A cards.

Key Feature Block Diagram

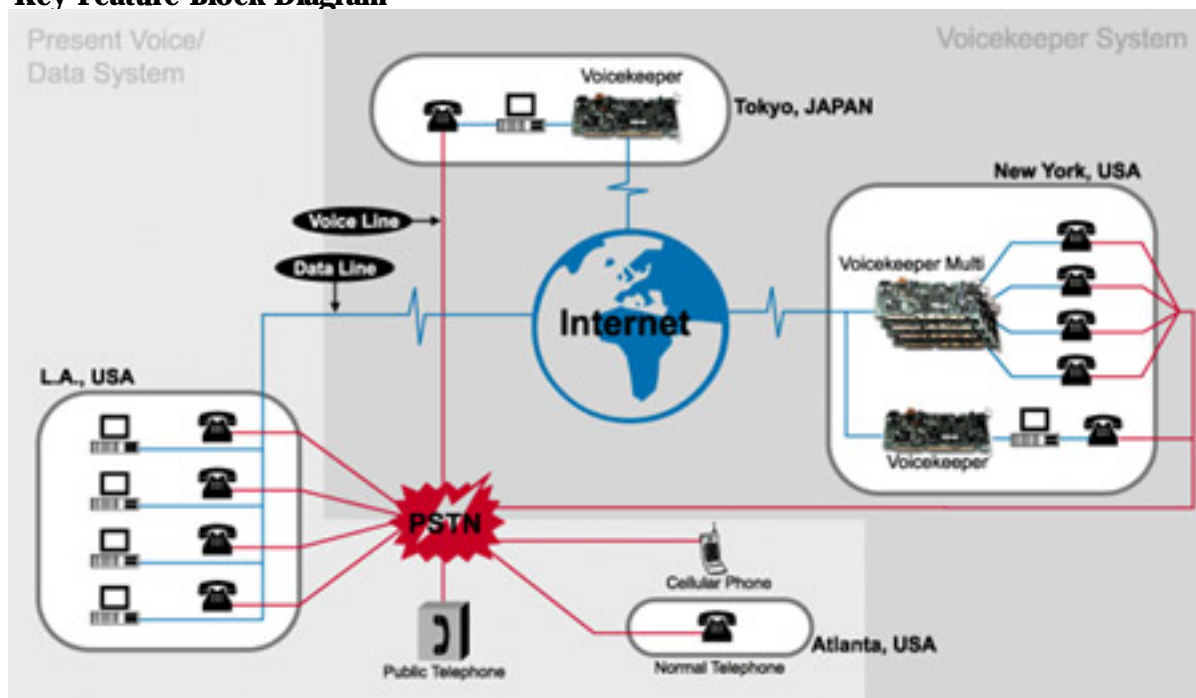

Key feature

**4 Channel VoIP Gateway System
4 Channel POTS port, 4 Channel PSTN port**

System Requirement

**586 PC (Pentium prefer)
4 ISA Slot
4 IRQ
32MB RAM
4 telephone line
4 general phone (option : there're useless if you use only call-forwarding)**

Install

**Download the Multi PnP information from ftp site <ftp://www.quakecom.com>
Download the Multi Program or take from our official dealer
Install the Device Driver & Multi Program
All procedure is PnP installation**