

Cordless Skype Dual Phone User Guide



Cordless Skype Dual Phone User Guide

U.S. Robotics Corporation
935 National Parkway
Schaumburg, Illinois
60173-5157
USA

No part of this documentation may be reproduced in any form or by any means or used to make any derivative work (such as a translation, transformation, or adaptation) without written permission from U.S. Robotics Corporation. U.S. Robotics Corporation reserves the right to revise this documentation and to make changes in the products and/or content of this document from time to time without obligation to provide notification of such revision or change. U.S. Robotics Corporation provides this documentation without warranty of any kind, either implied or expressed, including, but not limited to, implied warranties of merchantability and fitness for a particular purpose. If there is any software on removable media described in this documentation, it is furnished under a license agreement included with the product as a separate document, in the hard copy documentation, or on the removable media in a directory named LICENSE. If you are unable to locate a copy, please contact USRobotics and a copy will be provided to you.

UNITED STATES GOVERNMENT LEGEND If you are a United States government agency, then this documentation and the software described herein are provided to you subject to the following:

All technical data and computer software are commercial in nature and developed solely at private expense. Software is delivered as "Commercial Computer Software" as defined in DFARS 252.227-7014 (June 1995) or as a "commercial item" as defined in FAR 2.101(a) and as such is provided with only such rights as are provided in USRobotics standard commercial license for the Software. Technical data is provided with limited rights only as provided in DFAR 252.227-7015 (Nov 1995) or FAR 52.227-14 (June 1987) whichever is applicable. You agree not to remove or deface any portion of any legend provided on any licensed program or documentation contained in, or delivered to you in conjunction with, this Administrator Guide.

Copyright © 2006 U.S. Robotics Corporation. All rights reserved. U.S. Robotics and the USRobotics logo are registered trademarks of U.S. Robotics Corporation. Other product names are for identification purposes only and may be trademarks of their respective companies. Product specifications subject to change without notice.

Contents

Environment and Safety	5
Introduction	7
Package Contents	7
Physical Features	7
System Requirements.....	9
Installation	11
Performing Initial Installation.....	11
Understanding the System Tray Icon.....	12
Adding a Handset to Your System.....	12
Basic Operations	15
Navigating the Menus.....	15
Entering Text.....	17
Basic Call Functions	17
Skype Features	23
Making a Skype Conference Call	23
Changing Your Skype Presence	23
Voicemail.....	24
SkypeOut Credits	25
Phonebook.	27
Storing a Name and Number	27
Dialling from the Phonebook	28
Editing Phonebook Entries.....	28
Deleting Phonebook Entries.....	29
Copying Phonebook Entries.....	30
Viewing Storage Availability.....	30
Using Quick Dial.....	30
Advanced Operations	33
Advanced Call Functions	33
Phone Settings	36
Additional Handset Features.....	42
Call Records	43
Multi-Handset Functions.....	45
Troubleshooting	49
Basic Procedure	49
Specific Problems.....	49
Reboot Procedure	51
Support Information	53
Regulatory Information.	55
U.S. Robotics Corporation Two (2) Year Limited Warranty	61

Environment and Safety

Warning:

Skype is not a telephony replacement service. Any VoIP service used in conjunction with the Cordless Skype Dual Phone cannot be used for calls to emergency services or emergency telephone numbers (311, 911, 112, 999, etc.). Use a land line for calls to emergency services, such as police, fire, or ambulance.

Power Requirements: The product requires an electrical supply of 220 – 240 volts, single phase alternating current, excluding IT installations defined in standard EN 60950.

Battery Requirements: The handset requires power source of two rechargeable NiMH batteries, size AAA 1.2V 650mAh (HR10/44). IF THE SUPPLIED BATTERIES ARE NOT USED, A WARNING MESSAGE WILL BE DISPLAYED.

Warning:

The electrical network is classified as dangerous according to criteria in the standard IEC 60950. The only way to power down this product is by unplugging the power supply from the electrical outlet. Ensure the electrical outlet is located close to the apparatus and is always easily accessible.

Safety Precautions:

- Do not allow the handset to come into contact with liquids or moisture.
- Do not open the handset or base station. This could expose you to high voltages.
- Do not allow the charging contacts of the charger or the battery to come into contact with extraneous conductive materials.
- There is a slight chance that the telephone could be damaged by an electrical storm. It is recommended that users unplug the phone from the USB socket during a storm.
- Do not use the handset in an explosive hazard area such as where there is gas leaking.
- Young children should be supervised to ensure that they do not play with the telephone.

Environmental Care: Please remember to observe the local regulations regarding the disposal of your packaging materials, exhausted batteries and old phone and where possible promote their recycling.

Because the phone works by sending radio signals between the base unit and the handset, wearers of hearing aids may experience interference in the form of a humming noise.

We advise that this phone should not be used near intensive care medical equipment or by persons with pacemakers.

Your phone can interfere with electrical equipment such as answering machines, TV and radio sets if placed too close. It is recommended that you position the base unit at least one meter from such appliances.

Privacy of communications may not be ensured when using this telephone.

Warning:

RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. Never use non-rechargeable batteries; use recommended type supplied with this telephone. NiMH batteries must be disposed of in accordance with the applicable waste disposal regulations.

Introduction


Call around the world for free—no cords attached—with the Skype certified USRobotics Cordless Skype Dual Phone. The base station connects to a USB port on your computer and to your existing phone line so you can switch seamlessly between using the powerful Skype Internet voice application and making traditional phone calls. The bright, graphical LCD screen provides convenient access to your contacts and call lists, and it supports Skype Caller ID. Call from your Skype Contacts list or PSTN Phonebook, or use the keypad for direct dialling. Whichever method you choose, the Cordless Skype Dual Phone lets you call telephones anywhere in the world.

Package Contents

- Base Station and power adapter
- Handset
- Charger and power adapter
- Phone cord
- 2 rechargeable AAA batteries
- USRobotics Installation CD-ROM
- Quick Installation Guide
-


Physical Features

Base Station

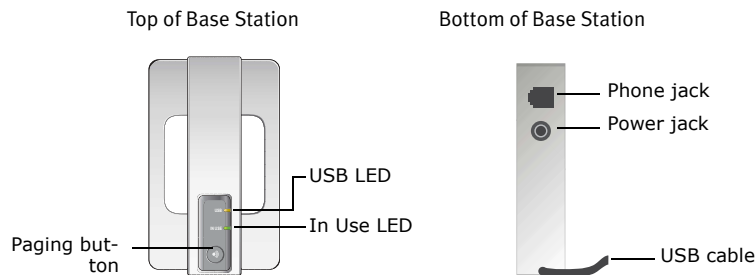


Handset



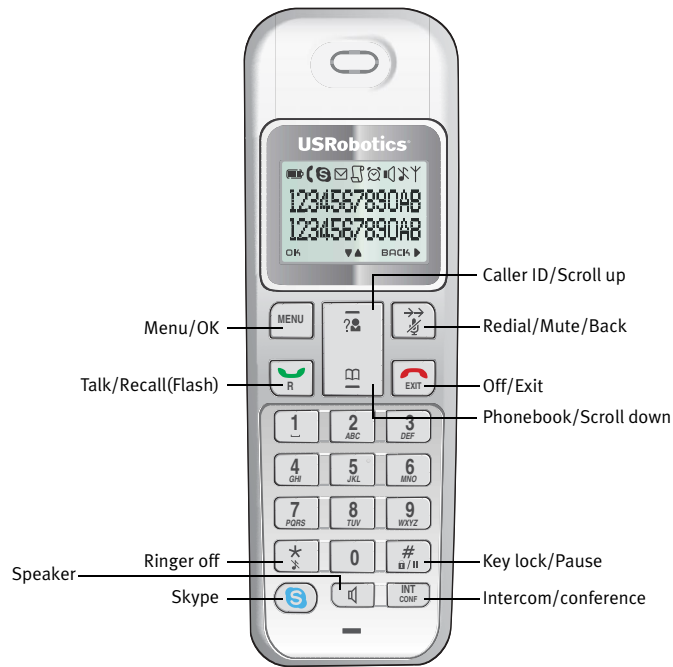



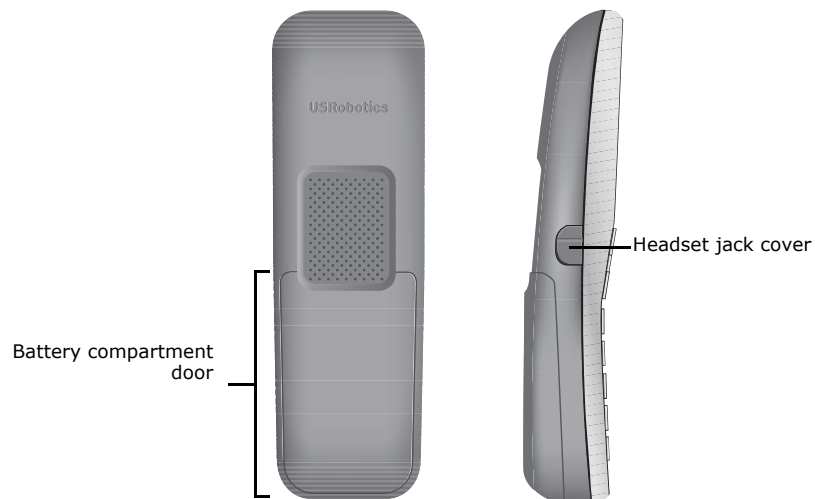







Keys




Back and Side



Display Icons

 Battery status	 Alarm clock set	 Scroll down
 Landline call	 Speaker on	 Scroll up
 Skype	 Ringer off	 BACK Back/ erase character
 Message waiting	 Link to base station (signal)	 More text to the right
 Missed call	 Confirmation of selection	

Charger

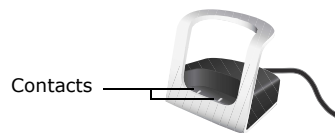

System Requirements

To install and use the Cordless Skype Dual Phone and Skype™ Internet telephony service, your PC must meet the following minimum requirements:

- Windows® 2000 or XP
- 400 MHz processor
- 128 MB RAM
- USB port (USB 1.1 or USB 2.0)
- Internet Connection (broadband recommended)
- CD-ROM drive or DVD drive

Installation

This section covers both the initial installation of your Cordless Skype Dual Phone and expanding your system with additional handsets.

Performing Initial Installation

Step One: Install the Phone

1. Insert the USRobotics Installation CD-ROM into your computer's CD-ROM or DVD drive.

If the CD doesn't start automatically, start it manually as follows:

- A. Windows XP: Click Windows **Start** > **My Computer**.
Windows 2000: Click Windows **Start** > **Settings** > **My Computer**.

- B. Double-click the CD drive.

If you already have Skype 2.0 or later installed on your computer, go to step number 3.

2. Select **Install Skype** and follow the on-screen prompts.
3. Select **Install Phone** and follow the on-screen prompts.



The on-screen installation program leads you through all of the steps required to install your Cordless Skype Dual Phone for use with Skype.

Note: The installation program will not let you install the Cordless Skype Dual Phone software unless Skype 2.0 or later is installed on your PC.

Once the phone application program is installed on your PC, it will start automatically whenever you start the PC; the Cordless Skype Dual Phone icon will appear in your system tray.

Step Two: Select Your Country

(Not required on North American models.)

1. Turn on the handset by pressing  until text appears on the screen.
2. When the handset indicates that it has established a link with the base station , press any key on the handset.
3. Select your country and press **OK** (the Menu key).

Once the handset detects both Skype and the base station, your Skype online status appears on the phone's display. Your phone is now ready for use.

Congratulations. You have successfully completed the installation procedure. Please register your Cordless Skype Dual Phone at www.usr.com/productreg/.

Understanding the System Tray Icon

The phone's application program always displays an icon in your system tray. When the base station is connected to the PC, the icon is green. A red icon indicates trouble with the connection. To display text describing the connection status, double click the icon.

Stopping the Phone Program

You can stop the phone program as follows: right click the icon in the system tray and select **Exit**.

Restarting the Phone Program

To restart the program, click Windows **Start > Programs > USRobotics Cordless Skype Dual Phone**.

Adding a Handset to Your System

The Cordless Skype Dual Phone base station can support up to four handsets.

Charge the Batteries

Every handset comes with a charger, a charger adapter, and two rechargeable NiMH AAA batteries.

1. Connect the charger adapter to an electrical outlet.
2. Remove the battery compartment cover by sliding it toward the bottom of the handset.
3. Insert the batteries, observing their polarities, into the battery compartment and replace the cover.
4. Set the handset in the charger and let the batteries charge for 14 hours.

The handset may become warm during initial charging.

Register the Handset


If the handset displays UNREGISTERED you need to register the handset with the base station as follows:

1. Press **MENU**.

2. Select **ADVANCED SET** and press **OK**.
3. Select **REGISTRATION** and press **OK**.
4. Press and hold the **PAGING** key on the base for 4 seconds. The base station is now in registration mode, and both LEDs are blinking.
5. Enter the PIN on the handset and press **OK**.


The default PIN is 0000.

During the registration period, the handset displays **SEARCH BASE**.

- **Successful registration**—You will hear a confirmation tone if the registration is successful. The handset displays its label, number, and clock. If the base station is connected to a computer that is running the phone application, the phone displays .
- **Unsuccessful registration attempt**—If the handset did not register, it displays UNREGISTERED. Follow the registration process again.

Select Your Country

If your handset has a COUNTRY option, it configures the handset to the correct network and language settings for the country that you select. If your phone does not have a COUNTRY option, the handset already is configured for the country in which it was sold. Follow the steps below to determine whether you have a COUNTRY option and, if so, to set it.

1. Press **MENU**.
2. Select **ADVANCED SET** and press **OK**.
3. Press  to scroll to the **COUNTRY** option and press **OK**.

If there is no COUNTRY option, you are finished installing your handset.

4. Select the country in which you are using the phone and click **OK**.

Basic Operations

Introductory text outlining the divisions.

Navigating the Menus

The phone's menus provide options that let you change settings and review call history; they also provide access to both your Skype Contacts list and your PSTN phonebook.

To use the menus,

1. If the handset name is displayed, press **MENU**.

OR

If the telephone name is not displayed, press , then press **MENU**.

The phone displays SKYPE.

2. To select Skype, press the **OK** soft key (the MENU key).

OR

To display the next option, press ▲ or ▼ repeatedly until the option that you want is displayed. Then press **OK**.

Repeatedly pressing the up and down soft keys to reach the option that you want is called *scrolling*.

Depending on the option you chose, you may be at a point where you can use a specific feature, or you may have to choose an option from a sub-menu in order to find the feature. As long as you see ▲ and ▼, you can scroll through the options until you find the one that you want. When you do, press **OK**.

To help you get acquainted with the menu structure, the following table lists the menus and the options available in each.

Menu Options and Their Default Values

Menu	Option	Default Value	
Skype	Contacts	<i>n/a</i>	
	User Status	<i>n/a</i>	
	Voicemail	<i>n/a</i>	
	Credits	<i>n/a</i>	
Phonebook		<i>n/a</i>	
	Private	View	<i>n/a</i>
		Add	<i>n/a</i>
		Edit	<i>n/a</i>
		Quick Dial	<i>n/a</i>
		To Shared	<i>n/a</i>
		Delete	<i>n/a</i>
		Delete All	<i>n/a</i>
		Status	<i>n/a</i>
	Shared	View	<i>n/a</i>
		Add	<i>n/a</i>
		Edit	<i>n/a</i>
		To Private	<i>n/a</i>
		Delete	<i>n/a</i>
Delete All		<i>n/a</i>	
Clock/Alarm	Set Clock	00:00	
	Set Alarm	Off	
	Alarm Tone	Melody 3 Volume: Level 3	
Personal Set	Handset Tone	Skype: Melody 2 Phone: Melody 1 Internal: Melody 1 Volume: Level 3 Confirm: On	
	Handset Name	B205	
	Contrast	Level 2	
	Auto Answer	Off	
	Backlit	On	
	Language	Language 1	

Menu	Option	Default Value	
Advanced Set	Flash Time	Duration 1	
	Dial Mode	Tone	
	Pause	Pause 1	
	PABX	<i>n/a</i>	
	Area Code ¹	<i>n/a</i>	
	Baby Call	Off	
	Registration	<i>n/a</i>	
	Base Select	Auto	
	Delete HS	<i>n/a</i>	
	Change PIN ²	0000	
	Reset	<i>n/a</i>	
	Call Records ³		
Missed		To Shared	<i>n/a</i>
		To Private	<i>n/a</i>
		Delete	<i>n/a</i>
Received		Delete All	<i>n/a</i>
		To Shared	<i>n/a</i>
		To Private	<i>n/a</i>
Dialled		Delete	<i>n/a</i>
		Delete All	<i>n/a</i>
		To Shared	<i>n/a</i>
		To Private	<i>n/a</i>
		Delete	<i>n/a</i>
	Delete All	<i>n/a</i>	

1. On North American models only.

2. On all except North American models.

3. For access to the Called Records menu, press the CID key.

Entering Text

Some functions, such as adding an entry to your phonebook, require that you enter text.

To enter text, repeatedly press the key labelled with the letter that you want until the letter appears in the phone's display. For example, the 2 key also enters the letters A, B, and C; to enter the letter C, press the 2 key three times.

You can also enter special symbols by repeatedly pressing a key.

To Enter This	Use This Key
space	1
pause	#
+	0

To switch between upper and lower case while entering text, press #.

Basic Call Functions


This section tells you how to make and end calls and how to change volume settings while you are on a call.

Making a Skype-to-Skype Call



To call a Skype user, the user must appear in your Skype Contacts list. If your contacts list is empty, add a contact as follows:





1. In the system tray, double-click the Skype icon.
2. Click **Add Contact** and follow the on-screen prompts.

After the contact has been added to the Contacts list, you can use your Cordless Skype Dual Phone keypad to call the contact as follows:

1. Press 
2. Scroll up or scroll down until you reach the contact that you want to call.


A Skype presence icon before each contact lets you know whether the user wants to be called. The table below shows the meaning of each icon.

Icon Displayed on Handset	Skype Presence
	Online / Skype Me
	Away

Icon Displayed on Handset	Skype Presence
Picture to come 	Not Available
Picture to come 	Do Not Disturb
Picture to come 	Offline
Picture to come 	SkypeOut Entry

3. Press 

OR

Press 

Making a Skype-to-Landline Call

To call a land line phone via Skype, you must subscribe to SkypeOut™. You can subscribe as follows:

1. In the system tray, double-click the Skype icon.
2. From the **Tools** menu, select **SkypeOut** and follow the on-screen prompts.

Once you have SkypeOut credit, you can use your Cordless Skype Dual Phone to place the call as follows:

1. Use the number keys to enter the number that you want to call.

When calling a landline from Skype, you must always use international dialling format, even if you are calling a number in the same country. The format of the call is one of the following, depending on the country from which you are calling.

- 00 + country code + phone number
- 011 + country code + phone number

2. Press 

If you add the landline number to your Skype Contacts list, you can call the landline by scrolling your contacts list and pressing the Skype key.

Making a Call through Your Land Line

Direct Dialling

1. Enter the number that you want to call, up to 20 digits.

The number appears on the display.

2. Press 


Dialling through Your Phonebook

To store a number in your phonebook:

1. Go to the PHONEBOOK menu.
2. If you want the phone number to be available to all handsets, scroll to the **SHARED** option; otherwise, scroll to the **PRIVATE** option.
3. Press **OK**.
4. Scroll until you see **ADD**; then press **OK**.
5. Enter a name for the phone number; then press **OK**.
6. Enter all of the digits that you need to dial to reach that phone number; then press **OK**.

The phone confirms addition of the number to your phonebook.

To call a number that has been saved in your phonebook:

1. Go to the PHONEBOOK menu.
2. Scroll to the list, either private or shared, in which you saved the number; then press **OK**.
3. Scroll until you see the View option, then press **OK**.
4. Scroll until you see the name associated with the number that you want to call.
5. Press  .
6. For more information about managing your phonebook, see [Phonebook](#).

Answering a Call

To answer a call:

- If the Skype icon flashes, press  or  .

When the Skype icon flashes, the caller's full name or Skype name is shown on the display.

- If the landline icon flashes, press  .

You have to subscribe to caller ID service from your local service provider in order to see the caller's name and number on the display.

You can also distinguish between the two kinds of calls by setting different ring tones as described in [Select your handset's ringing melody](#).

Ending a Call

To end a call:

- Press 

OR

Place the handset in the charger.

Adjusting Call Volume

You can increase or decrease the volume of a caller's voice during a call. There are 5 volume levels for selection.

To adjust the volume, during a call:

1. While the phone is off hook (i.e. dial tone is heard), press ▲ or ▼ .


The display shows the current volume level.

2. Press press ▲ or ▼ again to adjust the volume.

If you still cannot find a comfortable volume, you might need to adjust the volume on your computer as follows:


Windows XP

1. Click Windows **Start** > **Control Panel**.
2. Click **Sound and Audio Devices**.
3. In the **Audio** tab's **Sound playback**, select **USR Cordless Skype Dual Phone** and click **Apply**.
4. Click the sound playback **Volume** button.
5. Adjust the volume by dragging the slider. When finished, close the volume control window.
6. In **Sound playback**, select your original sound device.
7. Click **OK**.

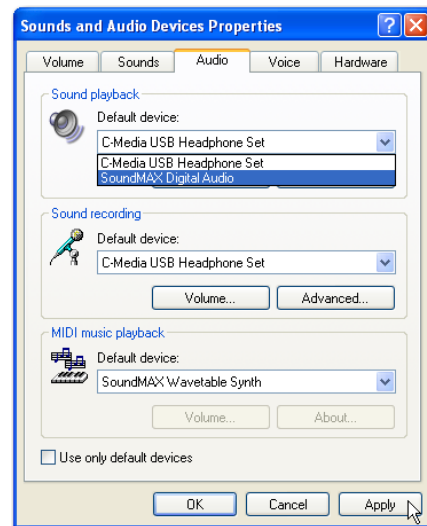

Windows 2000

1. Click Windows **Start** > **Settings** > **Control Panel**.
2. Double-click **Sounds and Multimedia**.
3. In the **Audio** tab's **Sound playback**, select **USB Audio Device** and click **Apply**.
4. Click the sound playback **Volume** button.
5. Adjust the volume by dragging the slider. When finished, close the volume control window.
6. In **Sound playback**, select your original sound device.
7. Click **OK**.

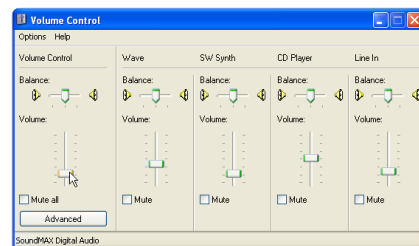


Muting Your Voice

During a call, if you wish to speak to someone privately without having the caller hear your conversation:

1. Press .



The phone displays MUTE. The caller cannot hear you, but you can hear the caller.

2. Press  again to speak with the caller.

Skype Features

Making a Skype Conference Call

To start a 3-way Skype conference call:

1. Make a Skype call to the first party.
2. After the first party answers the call, press  to seize the line.
3. Make a Skype call to the second party.
4. When the second party answers the call, press and hold  to join the two parties.

Changing Your Skype Presence

You can use your handset to change your Skype presence. Your presence icon lets other Skype users know whether you are accepting calls. To change your Skype presence:

1. Press **MENU**.
2. Select **SKYPE** and press **OK**.
3. Select **USER STATUS** and press **OK**.
4. Select the status that you want other Skype users to see.


Status	Icon Displayed on Handset
Online / Skype Me	Picture to come
Away	Picture to come
Not Available	Picture to come
Do Not Disturb	Picture to come
Offline	Picture to come
SkypeOut Entry	This icon seems meaningless as a selection option in this menu. (Though sensible when displayed before a name in the Contacts list)

5. Press **OK** to save the status.

Voicemail

If you have Skype Voicemail, you can use your handset to manage your messages. To purchase Skype Voicemail, go to www.skype.com/products/skypevoicemail.

Retrieving Voicemail

If you see  on the handset display, you have a message waiting. To retrieve it:

1. Press **MENU**.
2. Select **SKYPE** and press **OK**.
3. Select **VOICEMAIL** and press **OK**.
4. Scroll to the message you want to hear and press **MENU**.

An asterisk (*) indicates that the message is new.

5. Select **PLAY** and press **OK**.

Deleting Voicemail

1. Press **MENU**.
2. Select **SKYPE** and press **OK**.
3. Select **VOICEMAIL** and press **OK**.
4. Scroll to the message you want to hear and press **MENU**.
5. Select **DELETE** and press **OK**.

Deleting All Voicemail

1. Press **MENU**.
2. Select **SKYPE** and press **OK**.
3. Select **VOICEMAIL** and press **OK**.
4. Press **MENU**.
5. Select **DELETE ALL** and press **OK**.

The handset confirms deletion of all voicemail messages.

SkypeOut Credits

SkypeOut lets you use Skype to call landlines and mobile phones. If you have SkypeOut, you can use your handset to check your SkypeOut credit balance as follows:

1. Press **MENU**.
2. Select **SKYPE** and press **OK**.
3. Select **CREDITS** and press **OK**.

Your credit balance is displayed in euros.

Phonebook

The phonebook stores numbers that you call from your landline. It does not store Skype numbers; those are stored in the Skype contacts list. Your phone has one or more private phonebooks and one shared phonebook.

A private phonebook is stored in the handset. If you have more than one handset, each has its own private phonebook. A private phonebook can store 50 entries.

The shared phonebook is stored in the base station and is available to all handsets registered with the base station. The shared phonebook can store 10 entries.

Storing a Name and Number

Each entry can store a name of up to 10 characters and a number of up to 20 digits. You can store an entry through the phonebook menu or from a list of recently called numbers.

Store by Using the Phonebook Menu

1. Press **MENU**.
1. Select **PHONEBOOK** and press **OK**.
2. Select the phonebook, **PRIVATE** or **SHARED**, and press **OK**.
3. Select **ADD** and press **OK**.

If your phonebook is full, the handset displays **FULL**. You have to delete an entry before you can add a new one.

4. Enter a name and press **OK** to continue. Note that each name must be unique within the phonebook.

If you make a mistake, press **BACK** to delete the last character entered.

5. Enter the phone number and press **OK**.

If you need a dialling pause in the number, enter the pause by pressing and holding **#** until the handset displays **P**.

If you entered a duplicate name, the display asks whether to replace the entry. To replace the entry, press **OK**; to change the name of the new entry, press **BACK**.

Store a Recently Called Number

Dialling from the Phonebook

Using Menus

To view your phonebook entries and select one for dialling:

1. Press **MENU**.
2. Select **PHONEBOOK** and press **OK**.
3. Select the phonebook, **PRIVATE** or **SHARED**, and press **OK**.
4. Select **VIEW** and press **OK**.
5. Scroll to the number that you want to call


OR

Search by letter: to display names starting with a specific letter, press the key that has that letter on it.

6. Press **TALK**.

Using the Phonebook Key

The Phonebook key is a shortcut to your private phonebook, saving you the time of navigating menus. To use the phonebook key:

1. Press  .
2. Scroll to the number that you want to call

OR

Search by letter: to display names starting with a specific letter, press the key that has that letter on it.

3. Press **TALK**.

Editing Phonebook Entries

1. Press **MENU**.
1. Select **PHONEBOOK** and press **OK**.
2. Select the phonebook, **PRIVATE** or **SHARED**, and press **OK**.
3. Select **EDIT** and press **OK**.

4. Scroll to the entry that you want to edit.

OR

Search by letter: to display names starting with a specific letter, press the key that has that letter on it.

5. Press **OK**.
6. Edit the name and number using the keypad and press **OK**.
To erase a character, press **BACK**.
7. Press **OK** to save your changes.

Deleting Phonebook Entries

Delete a Single Entry

1. Press **MENU**.
1. Select **PHONEBOOK** and press **OK**.
2. Select the phonebook, **PRIVATE** or **SHARED**, and press **OK**.
3. Select **DELETE** and press **OK**.
4. Select the entry that you want to delete the entry and press **OK**.
The phone displays CONFIRM?
5. Press **OK** to confirm that you want to delete the entry.

Delete All Entries

1. Press **MENU**.
1. Select **PHONEBOOK** and press **OK**.
2. Select the phonebook, **PRIVATE** or **SHARED**, and press **OK**.
3. Select **DELETE ALL** and press **OK**.
The phone displays CONFIRM?
4. Press **OK** to confirm that you want to delete all entries.

Copying Phonebook Entries

You can copy all of your shared phonebook entries to your personal phonebook and vice-versa.

1. Press **MENU**.
2. Select **PHONEBOOK** and press **OK**.
3. Select the phonebook, **PRIVATE** or **SHARED**, and press **OK**.
4. Select **TO SHARED** or **TO PRIVATE** and press **OK**.

The phone displays CONFIRM?

5. Scroll to the entry that you want to copy to the other phonebook and press **OK**.

The phone displays the name.

6. Press **OK**.

The phone displays the number.

7. Press **OK**.

If the entry is already in the other phonebook, the display asks whether to replace the entry. To replace the entry, press **OK**; to leave the other phone book as is, press **BACK**.

Viewing Storage Availability

Your phone keeps track of how many entries you have added to your phonebooks and how many you can still add. To see these counts:

1. Press **MENU**.
2. Select **PHONEBOOK** and press **OK**.
3. Select the phonebook, **PRIVATE** or **SHARED**, and press **OK**.
4. Select **STATUS** and press **OK**.

The phone displays the number of free and used phonebook entries.

Using Quick Dial

The quick dial feature lets you dial private phonebook entries by pressing and holding one key. You can assign 9

quick dial keys, keys 1–9.

Note: If the BABY CALL feature is turned on, pressing any key will dial the BABY CALL number, not the quick dial number.

Assigning a Quick Dial Key

1. Press **MENU**.
2. Select **PHONEBOOK** and press **OK**.
3. Select **PRIVATE** and press **OK**.
4. Select **QUICK DIAL** and press **OK**.
5. Scroll to the key entry that you want to set and press **OK**.

The phone displays the first entry in your private phonebook.

6. Scroll to the phonebook entry that you want to assign to the selected key and press **OK**.

Quick Dialling

Press and hold the key assigned to the number that you want to call, and release the key when the phone displays the number. It usually takes about 2 seconds from the time you first press the key until the phone starts dialling the number.

Changing a Quick Dial Key

1. Press **MENU**.
2. Select **PHONEBOOK** and press **OK**.
3. Select **PRIVATE** and press **OK**.
4. Select **QUICK DIAL** and press **OK**.
5. Scroll to the key entry that you want to change and press **OK**.
6. Select **EDIT** and press **OK**.
7. Scroll to the phonebook entry that you want to assign to the selected key and press **OK**.

Deleting a quick dial key

1. Press **MENU**.
2. Select **PHONEBOOK** and press **OK**.

3. Select **PRIVATE** and press **OK**.
4. Select **QUICK DIAL** and press **OK**.
5. Scroll to the key entry that you want to change and press **OK**.
6. Select **DELETE** and press **OK**.

The phone displays CONFIRM?

7. Press **OK** to confirm that you want to delete the quick key assignment.



Advanced Operations

Advanced Call Functions

Redialling

From a List

Your phone records the last 10 numbers or contacts that you have called, storing the first 32 characters of each name and phone number. To redial one of those numbers or contacts:

1. Press  . The most recently dialled number appears.
2. Scroll to the number that you want to dial.
3. Press  .

Last Number Dialed

To redial the last number dialed:

1. Press  .
2. Press  .

Quick Dialling

You can assign the number keys 1–9 to frequently dialled numbers in your private phonebook. Once a key is assigned, you can call the phone number by pressing and holding the key.

For information on how to set quick dial numbers, see [Using Quick Dial](#).


Recall (Call Waiting)

While on a call, you can make or receive a second call. To use this feature while the landline, you must subscribe to the call waiting service from your local service provider.



You can only use one line at a time: if you are on a Skype call, you can make or answer a second Skype call only; if you are on a landline call, you can make or answer a second call on the landline only.

Make a Second Outgoing Call While on a Skype Call


To make a second Skype call:


1. While on a call, press  .

The first call is put on hold and you hear a dial tone.

2. To call a Skype user, press  , select the contact to call and press  .



OR

To make a SkypeOut call, enter the number to call and press  .

3. To return to the first call or to toggle between calls, press  .

Make a Second Outgoing Call While on a Landline Call

To make a second landline call:



1. While on a call, press  .
2. The first call is put on hold and you hear a dial tone.
3. Enter the number to call and press  .

To toggle between the two landline calls, press  .



Receive a Second Incoming Call

When there is a second incoming call on the same line, you hear a call-waiting alert; when the second incoming call is on the other line, you hear two beeps.

If the second incoming call is on the same line,

1. Press  to place the first call on hold and pick up the second call.
2. To return to the first call or to toggle between calls, press  .



If the second incoming call is on the other line, you have to terminate the first call before you can pick up the second:

1. Press  to terminate the current call.
2. Pick up the incoming call by pressing  .

Chain Dialling


Chain dialling lets you link the numbers in multiple phonebook entries to form a single dialled number. To use chain dialling:

1. Enter the first number:

- A. Press .
- B. Select the first number that you want to dial.
- C. Press .

2. Enter the second number:

- A. Press and hold  for 2 seconds.

If you decide at this point to exit chain dialling, press and hold the  key again for 2 seconds.

- B. Select the next number that you want to dial.
- C. Press **OK**.

There is no limit to the number of times you can use chain dialling.


Making a Hands-free Call

Hands-free options provide the convenience of talking to a caller without having to hold on to the phone. The phone provides for hands-free calling with a built-in speaker and a headset jack.

Headset

The phone supports any headset that has a 2.5 mm plug. To use a headset:

1. Remove the phone's headset cover.

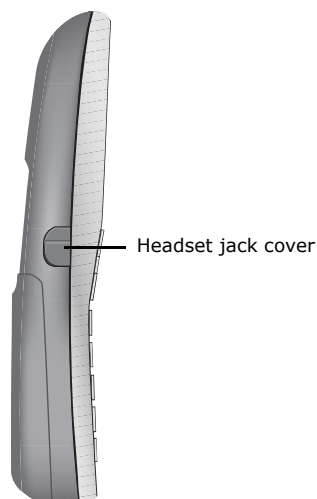



2. Plug the headset into the headset jack.



You can hear the caller from the earpiece of the headset, and you can speak via the headset's microphone.

Speaker

To use the built-in speaker:

1. While on a call, press .

You can hear the caller over the speaker and you can speak via the microphone;  appears on the display.

2. Press  or  to adjust the volume of the speaker.

If you cannot find a comfortable volume, you may need to adjust the volume setting on your computer. For instructions on setting your computer volume, see [Adjusting Call Volume](#).

To turn the speaker off, press .

Phone Settings

Time Settings


Setting the Time of Day

The phone obtains the current time from your computer. You can also adjust the clock manually as follows:

1. Press **MENU**.
2. Select **CLOCK/ALARM** and press **OK**.
3. Select **SET CLOCK** and press **OK**.
4. Use the numeric keys to enter the time of day in 24-hour format.
5. Press **OK** to save the new time of day.

Setting the Alarm Clock

The phone has a built-in alarm clock. In addition to setting the alarm time and whether the alarm is on or off, you can select the alarm melody and volume. When the alarm rings, it rings for one minute.

Note: To turn off the alarm while it is ringing, press .

On, Off, and Time

1. Press **MENU**.
2. Select **CLOCK/ALARM** and press **OK**.

3. Select **SET ALARM** and press **OK**.
4. Select **ON** or **OFF** and press **OK**.

If you select ON, the alarm time is displayed. Use the numeric keys to enter the alarm time in 24-hour format.

5. Press **OK** to save your alarm settings.

Melody

1. Press **MENU**.
2. Select **CLOCK/ALARM** and press **OK**.
3. Select **ALARM TONE** and press **OK**.
4. Select **MELODY** and press **OK**.

The phone plays the melody that is selected.

5. Select the melody that you want and press **OK**.

Volume

1. Press the **MENU** key.
2. Select **CLOCK/ALARM** and press the **OK** key.
3. Select **ALARM TONE** and press the **OK** key.
4. Select **VOLUME** and press the **OK** key. The current setting is displayed.
5. Select the desired volume level.
6. Press the **OK** key to confirm.

1. Press **MENU**.
2. Select **CLOCK/ALARM** and press **OK**.
3. Select **ALARM TONE** and press **OK**.
4. Select **VOLUME** and press **OK**.

The phone displays the volume setting and plays the alarm melody at that volume.

5. Select the volume that you want and press **OK**.

Personal Settings

Display

Name Your Handset

Each handset has a unique name for easy identification. In idle mode, the handset displays its the time of day. To see the phone's name, press **MENU**.

To change the name of a handset:

1. Press **MENU**.
2. Select **PERSONAL SET** and press **OK**.
3. Select **HANDSET NAME** and press **OK**.

The handset name is displayed.

4. Edit the handset name.

The name can be up to 10 characters long and can contain letters, numbers, and spaces.

5. Press **OK** to save your changes.

Adjust the Contrast

1. Press **MENU**.
2. Select **PERSONAL SET** and press **OK**.
3. Select **CONTRAST** and press **OK**.
4. Select your preferred contrast level and press **OK**.

Auto Answer

Auto answer gives you the convenience of answering a call by just picking up the phone from the charger. You do not need to press the TALK key.

1. Press **MENU**.
2. Select **PERSONAL SET** and press **OK**.
3. Select **AUTO ANSWER** and press **OK**.
4. Select **ON** or **OFF** and press **OK**.

Turn the Backlight On and Off

1. Press **MENU**.
2. Select **PERSONAL SET** and press **OK**.
3. Select **BACKLIT** and press **OK**.

4. Select **ON** or **OFF** and press **OK**.

Set your phone's language

1. Press **MENU**.
2. Select **PERSONAL SET** and press **OK**.
3. Select **LANGUAGE** and press **OK**.
4. Select your preferred language and press **OK**.

Sounds

Select your handset's ringing melody

1. Press **MENU**.
2. Select **PERSONAL SET** and press **OK**.
3. Select **HANDSET TONE** and press **OK**.
4. Select the line for which you want to set the ringtone.

Choose from telephone, Skype, or internal. Internal is the ringtone for paging the handset from the base and for using the intercom between handsets.

5. Select your preferred ringtone and press **OK**.

Selecting your handset's ringing volume

1. Press **MENU**.
2. Select **PERSONAL SET** and press **OK**.
3. Select **HANDSET TONE** and press **OK**.
4. Select **VOLUME** and press **OK**.
5. Select your preferred volume and press **OK**.

You can also turn off your ringer temporarily by using the handset keys. For more information, see [Ringer On/Off](#)

Turning the key beep on/off

1. Press **MENU**.
2. Select **PERSONAL SET** and press **OK**.
3. Select **HANDSET TONE** and press **OK**.
4. Select **KEYBEEP** and press **OK**.
5. Select **ON** or **OFF** and press **OK**.

Advanced Settings

Recall


You may know the recall function as "flash" or "switchhook". It is commonly used to manage call waiting. Your phone comes with different flash durations. Check with your local telephone service provider if you are not sure which duration to use. To change the flash duration:

1. Press **MENU**.
2. Select **ADVANCED SET** and press **OK**.
3. Select **RECALL TIME** and press **OK**.
4. Select your preferred flash duration and press **OK**.

Dial Mode

Your phone is set to tone dialling. You can switch to pulse dialling if necessary.

1. Press **MENU**.
2. Select **ADVANCED SET** and press **OK**.
3. Select **DIAL MODE** and press **OK**.
4. Select **TONE** or **PULSE** and press **OK**.

If the dialling mode is set to pulse, you can set it for temporary tone dialling by pressing and holding . The phone displays a D. All the following digits are dialled as tones until you hang up.

To reviewers: I think that if you press and hold the * key, all you do is turn the ringer off. Has anyone else tested this feature as documented in Ascalade's draft user guide?

Pause

You may need to enter a pause between digits in a phone number. For example, some systems require a pause after you dial a code to secure an outside line. You enter the pause by pressing the # key. The length of the pause is determined by the pause feature. To change the pause duration:

1. Press **MENU**.
2. Select **ADVANCED SET** and press **OK**.
3. Select **PAUSE** and press **OK**.
4. Select your preferred pause duration and press **OK**.

PABX

If your phone is on a PABX, you can set the PABX number:

1. Press **MENU**.
2. Select **ADVANCED SET** and press **OK**.
3. Select **PABX** and press **OK**.
4. Use the number keys to enter the PABX number.
5. Press **OK**.

Baby Call

You can set the phone to dial a specified number when any key is pressed (except the OFF key), making it easy for someone with limited dialling ability to reach help. When **BABY CALL** is on, the phone acts as an emergency calling device and regular calling functions are not available.

Set the **BABY CALL** Number

1. Press **MENU**.
2. Select **ADVANCED SET** and press **OK**.
3. Select **BABY CALL** and press **OK**.
4. Use the number keys to enter the **BABY CALL** number.
5. Press **OK**.

The phone displays **BABY CALL**.

Turn **BABY CALL** Off

1. Press **OFF**.
2. Select **OFF** and press **OK**.

VMWI

If you have voice mail on your PSTN, the phone displays a voicemail waiting indicator. To clear the indicator:

1. Press **MENU**.
2. Select **ADVANCED SET** and press **OK**.
3. Select **VMWI** and press **OK**.

The phone displays **DELETE**.

4. Press **OK**.

Additional Handset Features

Keypad Lock

The keypad can be locked to prevent the accidental pressing of keys such as might occur if you put the handset in your pocket. When the keypad is locked, you can still answer an incoming call by pressing the TALK key. During the call, the keypad is active. When you end the call, the keypad is locked again.




To lock and keypad, press and hold  . until LOCKED appears on the display.

To unlock the keypad, press and hold  . until LOCKED disappears from the display.


Ringer On/Off

Use these shortcuts to control the ringer:

To turn the ringer off, press and hold  until the phone displays .

If the phone displays , the ringer is off. To turn the ringer on, press and hold  until  disappears.

Message Waiting Indicator

If you subscribe to voicemail service from your local service provider or from Skype, the phone displays  when you have a new message in either mailbox. After you've listened to all the new messages, the message waiting indicator turns off.

Caller ID First Ring Suppression

If you subscribe to caller ID service, your phone suppresses the first ring on your PSTN line ensuring that you can see who is calling as soon as you hear the phone ring. If you reset your phone to its default settings, first ring suppression is deactivated. When you receive your next PSTN call, your phone automatically detects whether you have caller ID service and, if so, restarts first ring suppression.

Note: Once first ring suppression is activated, the first ring will be suppressed even if you drop the caller ID service. If you have dropped caller ID service and do not wish to have the first ring suppressed, restart the base station by removing its power supply and then plugging it back in.

Finding a Handset

To find a handset, press and release the PAGE key on the base station.

All handsets that are turned on, registered to the base, and in standby mode produce the paging tone and

display PAGING for 30 seconds. If an external call comes in, all the handsets stop the paging tone and play the external call melody.

To stop paging, press any key on each handset or press the PAGING key on the base station again.

Call Records

Your phone keeps a record of calls that you make, receive, or miss. You can view a list of the last 10 calls that you made, 5 calls that you received, and 15 calls that you missed. Skype call records are always stored. If you subscribe to caller ID service from your local telephone service provider, landline call records are also stored.

Each record contains a name up to 12 characters long and a number or Skype contact up to 32 characters long.


If the caller's name is available, the first 12 characters are displayed with the date and time that the call was received. If the name is not available, the first 12 characters of the caller's number are displayed with the date and time.

If a caller's number matches a phone number stored in the phonebook, the phonebook name is displayed instead of the caller ID name.


Each handset has its own call record lists, so you can delete records on one handset while keeping them on another.

Finding Out Who Called You (Call List)

Check Call Records

1. Press .
2. Select **MISSED** or **RECEIVED** and press **OK**.
3. Scroll to a record and press **▶** to view the number.

Call from a Call Record

When you are viewing a call record, you can return the call by pressing . If the call comes in from the landline, the return call uses the landline; if the call comes in from Skype, the return call uses Skype.

Save a Call Record to Your Phonebook

You can save the numbers from landline calls to your phonebook.

1. View the call record that you want to save and press **MENU**.
2. Select the phonebook, private or shared, in which you want the record saved, and press **OK**.
3. Enter a name for the entry and press **OK**.

4. Edit the number, if necessary, and press **OK**.

The call record is now saved in your phonebook. The call record is still in your call list, but it shows the new name that you entered in the phonebook.

Delete a Call Record

To delete a single call record:

1. View the call record that you want to delete and press **MENU**.
2. Select **DELETE** and press **OK**.
3. Press **OK** to confirm deletion.

Delete All Call Records

To delete all call records:

1. View any call record and press **MENU**.
2. Select **DELETE ALL** and press **OK**.
3. Press **OK** to confirm deletion.

Finding Out Whom You Have Called (Dialled List)

Check Your Dialled Calls

1. Press .

The phone displays your most recent outgoing call record.

2. Scroll to see the records of your last 10 outgoing calls.

Save a Dial Record to Your Phonebook

You can save dialled numbers to your phonebook.

1. View the dial record that you want to save and press **MENU**.
2. Select the phonebook, private or shared, in which you want the record saved, and press **OK**.
3. Enter a name for the entry and press **OK**.
4. Edit the number, if necessary, and press **OK**.

The record is now saved in your phonebook. The dial record is still in your dial list, but it shows the new name

that you entered in the phonebook.

Delete a Dial Record

To delete a single dial record:

1. View the dial record that you want to delete and press **MENU**.
2. Select **DELETE** and press **OK**.
3. Press **OK** to confirm deletion.

Delete All Dial Records

To delete all dial records:


1. View any dial record and press **MENU**.
2. Select **DELETE ALL** and press **OK**.
3. Press **OK** to confirm deletion.

Multi-Handset Functions

Your base station supports up to 4 handsets. For information about installing additional handsets, see [Adding a Handset to Your System](#). If you have multiple handsets, you can use the phone as an intercom, transfer a call from one handset to another, or use your handsets for conference calling.

Call Someone in the House

Make an Intercom Call


1. Press .
2. Press the number of the handset that you want to call.

OR

Select the handset you want to call and press **OK**.



Answer an Intercom Call

When you receive an intercom call, your handset plays the internal ringtone and displays the number of the calling handset.


To answer, press .

Interrupt an Intercom Call

If an external call comes in while you are on an intercom call, you hear a call waiting signal. If you subscribe to caller ID service, the phone also displays the caller's information. To answer the external call:



1. Press  to end the intercom call.
2. Press  to answer the external call.

End an Intercom Call



To exit intercom, press .

Call Another Handset While You Are Talking on the Phone

While you are on an external call, you can put the external call on hold, call another handset, and return to the external call.


1. Press .
The external call is on hold.
2. Press the number of the handset that you want to call.
OR
Select the handset you want to call and press **OK**.
3. Wait for the other handset to answer the call.
Use  to toggle between the intercom and external calls.

Transfer a Call to Another Handset

1. While on an external call, press .
2. Press the number of the handset that you want to call.
OR
Select the handset you want to call and press **OK**.
3. When the other handset has answered, press  or place the handset on cradle.
The external call is transferred.


Make a 3-Way Conference Call

You can invite another handset to join a call with the external line.

1. While on an external call, press  .
2. Press the number of the handset that you want to call.

OR

Select the handset you want to call and press **OK**.

3. When the other handset answers, press and hold  until the phone displays CONFERENCE.

You are now in a conference call. If either handset exits the call, the other handset will still be connected to the external call.

Base Station Functions

Registering a Handset

A handset must be registered with a base station in order to work. You can register a handset with up to four base stations, and the handset communicates with only one at any given time. To register a handset with a base station, see [Register the Handset](#).

Selecting a Base

If your handset is registered to more than 1 base, you can select the base that the handset will use.

1. Press **MENU**.
2. Select **ADVANCED SET** and press **OK**.
3. Select **BASE SELECT** and press **OK**.
4. Select the base to use and press **OK**.

Deleting a Handset

You can register four handsets with a single base station. If the base station is full, you have to delete one handset from the registry before you can register another. To delete a handset:

1. Press **MENU**.
2. Select **ADVANCED SET** and press **OK**.
3. Select **DELETE HS** and press **OK**.

Reviewers: Contrary to the info in Ascalade's draft user guide, I was able use a handset to delete itself. I was not given the opportunity to enter a PIN during the process. Has anyone else tested this feature?

Changing the PIN

(Not available on all models.)

The base station pin is required when you are registering a handset. The default pin is 0000. To change it:

1. Press **MENU**.
2. Select **ADVANCED SET** and press **OK**.
3. Select **CHANGE PIN** and press **OK**.
4. Enter the current **PIN** and press **OK**.
5. Enter the new **PIN** and press **OK**.
6. Repeat the new PIN and press **OK**.

If the new PIN is not repeated correctly, you hear a rejection tone. Repeat step 3 through step 6.

Resetting to Default Values

You can reset the display, sounds, and other settings of your phone to their default values.

1. Press **MENU**.
2. Select **ADVANCED SET** and press **OK**.
3. Select **RESET** and press **OK**.

For default values, see [Menu Options and Their Default Values](#).

Reviewers: Again, the phone I'm using doesn't ask for PIN in order to reset. Shouldn't it?

Selecting Country

(Not available on all models.)

The correct country setting properly configures your phone to the correct network and language settings of the country that you are current in. To change the country setting.

1. Press **MENU**.
2. Select **ADVANCED SET** and press **OK**.
3. Select **COUNTRY** and press **OK**.
4. Select the country and press **OK**.

Troubleshooting

Basic Procedure

This procedure addresses a number of symptoms that you might experience with your handset:

1. Verify that the batteries are properly installed. The inside of the battery case has a picture showing the proper positions for the batteries.
2. Be sure to charge your phone for a full 14 hours before first use.
3. Verify that the USB and phone cables are connected properly.
4. Ensure that the power outlet to which the base station is connected is a live outlet.
5. Verify that your handset is registered with the base station. If the phone is not registered, the handset displays UNREGISTERED. To register the handset with the base station, follow the instructions in [Register the Handset](#).
6. Ensure that the handset is within the base station's cordless range by moving closer to the base station.
7. Ensure that the handset is turned on.

Note: This phone does not work during a power failure.

Specific Problems

If following the basic procedure above does not help get your phone working, find the procedure below whose description best matches the symptom that you are observing.

The battery icon remains empty although the handset has been on the charger for 14 hours.

1. Verify that the battery icon is scrolling while the handset is on the charger. If the icon is not scrolling, reseal the handset in the charger.
2. Contact your dealer to replace the rechargeable batteries.

The handset does not beep when placed on the charger.

If the handset is turned off, it will not beep when you place it on the charger. If the handset is turned on and it does not beep:

1. Reseat the handset in the charger to make sure that the charging contacts are properly aligned.
2. Take the handset off the charger and clean the charging contacts with a clean, dry cloth.

The handset has poor audio quality (such as crackling or echo).


1. If practical, move the PC to a different location.
2. Install the base station in a different room, in a higher location, or away from other electronic appliances.

The speaker volume is too soft (or too loud).

1. Adjust the speaker volume on your handset by pressing Scroll Up or Scroll Down.
2. Adjust the speaker volume on your PC as follows:


Windows XP

- A. Click Windows **Start** and select **Control Panel**.
- B. Click **Sound and Audio Devices**.
- C. In the **Audio** tab's **Sound playback**, select **USR Cordless Skype Dual Phone** and click **Apply**.
- D. Click the sound playback **Volume** button.
- E. Adjust the volume by dragging the slide. When finished, close the volume control window.
- F. Return to **Sound playback** and select your original sound device.
- G. Click **OK**.

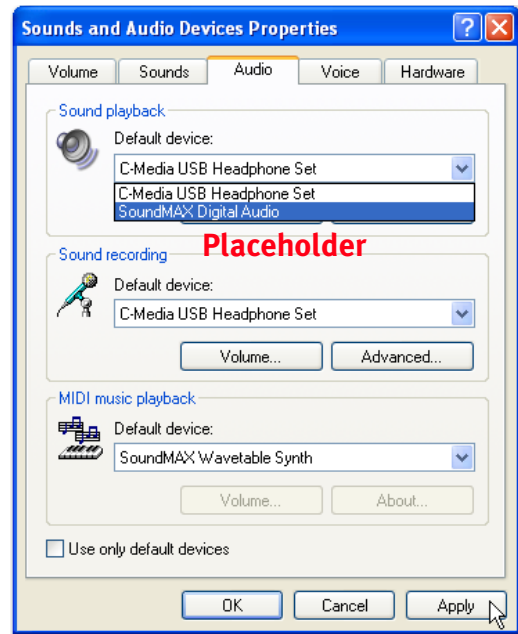

Windows 2000

- A. Click Windows **Start** > **Settings** > **Control Panel**.
- B. Double click **Sounds and Multimedia**.
- C. In the **Audio** tab's **Sound playback**, select **USB Audio Device** and click **Apply**.
- D. Click the sound playback **Volume** button.
- E. Adjust the volume by dragging the slide. When finished, close the volume control window.
- F. Return to **Sound playback** and select your original sound device.

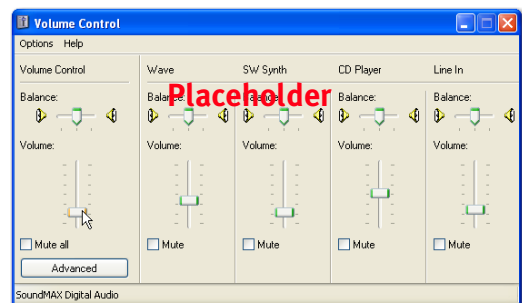

G. Click **OK**.


The phone does not ring when a call comes in.

If the phone displays , the ringer is off. To turn the ringer on, press and hold  until the  icon disappears.

I cannot place a Skype call using the phone's contact list.

Verify that your computer is on and that both Skype and the phone's application program are displaying green icons in your system tray.

I cannot make a SkypeOut call.

1. Press 00, + (press and hold 0), or 011. Then enter the phone number and press  .
2. Check your Skype account to make sure that you have enough SkypeOut credit.

Reboot Procedure

If the above solutions do not help, reboot the phone as follows:

1. Disconnect the power from both the handset and the base station.
2. Exit and restart both Skype and the USRobotics Cordless Skype Dual Phone program.
3. Wait for 15 minutes and try again.

Support Information

If you are having trouble with the configuration or operation of your Cordless Skype Dual Phone:

1. Refer to the “Troubleshooting” section in this guide.
2. Go to the Support section of the USRobotics Web site at www.usr.com/support/. Many of the most common difficulties that users experience have been addressed in the FAQ and Troubleshooting Web pages for your product. The product number of the Cordless Skype Dual Phone is 9630. You may need to know this to obtain information on the USRobotics Web site.
3. Submit your technical support question using an online form at www.usr.com/emailsupport/.
4. Contact the USRobotics Technical Support Department. To receive assistance, you need your serial number.

Country	Webmail	Voice
U.S.	www.usr.com/emailsupport/	(888) 216-2850
Canada	www.usr.com/emailsupport/	(888) 216-2850
Austria	www.usr.com/emailsupport/de	07110 900 116
Belgium (Flemish)	www.usr.com/emailsupport/bn	070 23 35 45
Belgium (French)	www.usr.com/emailsupport/be	070 23 35 46
Czech Republic	www.usr.com/emailsupport/cz	
Denmark	www.usr.com/emailsupport/ea	38323011
Finland	www.usr.com/emailsupport/ea	08 0091 3100
France	www.usr.com/emailsupport/fr	0825 070 693
Germany	www.usr.com/emailsupport/de	0180 567 1548
Greece	www.usr.com/emailsupport/gr	
Hungary	www.usr.com/emailsupport/hu	0180 567 1548
Ireland	www.usr.com/emailsupport/uk	1890 252 130
Italy	www.usr.com/emailsupport/it	800 979 266
Luxembourg	www.usr.com/emailsupport/be	342 080 8318
Middle East/Africa	www.usr.com/emailsupport/me	870 844 4546
Netherlands	www.usr.com/emailsupport/bn	0900 202 5857
Norway	www.usr.com/emailsupport/ea	23 16 22 37
Poland	www.usr.com/emailsupport/pl	
Portugal	www.usr.com/emailsupport/pt	21 415 4034
Russia	www.usr.com/emailsupport/ru	8 800 200 20 01
Spain	www.usr.com/emailsupport/es	902 117964
Sweden	www.usr.com/emailsupport/se	08 5016 3205
Switzerland	www.usr.com/emailsupport/de	0848 840 200
Turkey	www.usr.com/emailsupport/tk	0212 444 4 877
UAE	www.usr.com/emailsupport/me	0800 877 63

For current support contact information, go to www.usr.com/support.

Regulatory Information

Manufacturer's Declaration of Conformity

U.S. Robotics Corporation
935 National Parkway
Schaumburg, IL 60173
U.S.A.

declares that this product conforms to the FCC's specifications:

Part 15, Class B

Operation of this device is subject to the following conditions:

- 1) this device may not cause harmful electromagnetic interference, and
- 2) this device must accept any interference received including interference that may cause undesired operations.

This equipment complies with FCC Part 15 for Home Use.

Caution to the User: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Detachable Antenna Information

FCC Part 15, Subpart C, Section 15.203 Antenna requirement

USR5453 users: An intentional radiator shall be designed to ensure that no antenna other than that furnished by the responsible party shall be used with the device. The use of a permanently attached antenna or of an antenna that uses a unique coupling to the intentional radiator shall be considered sufficient to comply with the provisions of this section. The manufacturer may design the unit so that a broken antenna can be replaced by the user, but the use of a standard antenna jack or electrical connector is prohibited.

FCC Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20 cm between the radiator and your body.

Radio and Television Interference:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy. If this equipment is not installed and used in accordance with the manufacturer's instructions, it may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference

by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

USR declares USR 5453 is limited in CH1~11 from 2412 to 2462 MHz by specified firmware controlled in USA.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

UL Listing/CUL Listing:

For External products:

This information technology equipment is UL Listed and C-UL Listed for both the US and Canadian markets respectively for the uses described in the User Guide.

For Internal products:

This information technology equipment is UL Listed and C-UL Listed for both the US and Canadian markets respectively for use with UL-Listed personal computers that have installation instructions detailing user installation of card accessories.

For Laptop/Notebook products:

This information technology equipment is UL Listed and C-UL Listed for both the US and Canadian markets respectively for use only with UL Listed laptop or notebook computers.

For Canadian Users

Industry Canada (IC)

This equipment complies with the Industry Canada Spectrum Management and Telecommunications policy, RSS-210, standard Low Power License-Exempt Radio Communication Devices.

Operation is subject to the following two conditions:

1. This device may cause interference.
2. This device must accept any interference, including interference that may cause undesired operation of the device.

Users should ensure for their own protection that the electrical ground connections of the power utility, telephone lines, and internal metallic water pipe system, if present, are connected together. This precaution may be particularly important in rural areas.

This device has been designed to operate with an antenna having a maximum gain of 5 dBi. Attaching an antenna with a higher gain to this device is strictly prohibited per regulations of Industry Canada. The required antenna impedance is 50 ohms.

To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the

Equivalent Isotropic Radiated Power (EIRP) is not more than that required for successful communication.

Caution: Users should not attempt to make electrical ground connections by themselves, but should contact the appropriate inspection authority or an electrician, as appropriate.

CE Compliance



Manufacturer's Declaration of Conformity

We, U.S. Robotics Corporation of 935 National Parkway, Schaumburg, Illinois, 60173-5157 USA, declare under our sole responsibility that the product, U.S. Robotics Cordless Skype Dual Phone, Model 9630, to which this declaration relates, is in conformity with the following standards and/or other normative documents.

EN300 328
EN301 489-1
EN301 489-17
EN60950
EN61000-3-2
EN61000-3-3
EN50392

We, U.S. Robotics Corporation, hereby declare the above named product is in compliance and conformity with the essential requirements and other relevant provisions of Directive 1999/5/EC.

The conformity assessment procedure referred to in Article 10(3) and detailed in Annex II of Directive 1999/5/EC has been followed.

This equipment is in compliance with the European recommendation 1999/519/ECC, governing the exposure to the electromagnetic radiation.

This product can be used in the following countries:

UK, Ireland, Spain, Portugal, Germany, France, Luxembourg, Italy, Switzerland, Austria, Netherlands, Belgium, Norway, Sweden, Denmark, Finland, Czech Republic, Poland, Hungary, and Greece.

Regarding IEEE 802.11g we currently have the following information about restrictions in the R&TTE countries:

Country	Frequency band	Output power
France	2454-2483.5 MHz	10 mW EIRP outdoor

Regulatory Channel Frequency

Channel	Frequency (MHz)	FCC	Canada	ETSI
1	2412	X	X	X
2	2417	X	X	X
3	2422	X	X	X
4	2427	X	X	X
5	2432	X	X	X
6	2437	X	X	X
7	2442	X	X	X
8	2447	X	X	X
9	2452	X	X	X
10	2457	X	X	X
11	2462	X	X	X
12	2467			X
13	2472			X

EU Health Protection

This device complies with the European requirements governing exposure to electromagnetic radiation. This equipment should be installed and operated with minimum distance 20 cm between the radiator and your body. This wireless device is a transmitter/receiver and has been designed and manufactured to comply with the exposure limits recommended by the Council of the European Union and the International Commission on Non-ionizing Radiation Protection (ICNIRP, 1999) for the entire population. The exposure standard for portable equipment uses the "Specific Absorption Rate" as unit of measure. The maximum SAR value of this wireless device measured in the conformity test is 0.52 W/kg.

EU Detachable Antenna Information

This U.S. Robotics wireless device has been designed to operate with the antenna included in this package only. Together this device and antenna combination has been tested and approved by a European Agency conforming with the European R&TTE directive 1999/5/EC to meet the radiated power level requirement of 100mW e.i.r.p. Replacement of this antenna must only be done with an authorized U.S. Robotics component that has been designed and tested with the unit to the requirements of directive 1999/5/EC. Please refer to the U.S. Robotics Web site to get product antenna ordering information.

Operating Channels:

- IEEE 802.11g compliant
- 11 channels (US, Canada)
- 13 channels (ETSI)

Go to www.usr.com to see the most recent channel restriction information.

U.S. Robotics Corporation Two (2) Year Limited Warranty

1.0 GENERAL TERMS:

1.1 This Limited Warranty is extended only to the original end-user purchaser (CUSTOMER) and is not transferable.

1.2 No agent, reseller, or business partner of U.S. Robotics Corporation (U.S. ROBOTICS) is authorised to modify the terms of this Limited Warranty on behalf of U.S. ROBOTICS.

1.3 This Limited Warranty expressly excludes any product that has not been purchased as new from U.S. ROBOTICS or its authorised reseller.

1.4 This Limited Warranty is only applicable in the country or territory where the product is intended for use (As indicated by the Product Model Number and any local telecommunication approval stickers affixed to the product).

1.5 U.S. ROBOTICS warrants to the CUSTOMER that this product will be free from defects in workmanship and materials, under normal use and service, for TWO (2) YEARS from the date of purchase from U.S. ROBOTICS or its authorised reseller.

1.6 U.S. ROBOTICS sole obligation under this warranty shall be, at U.S. ROBOTICS sole discretion, to repair the defective product or part with new or reconditioned parts; or to exchange the defective product or part with a new or reconditioned product or part that is the same or similar; or if neither of the two foregoing options is reasonably available, U.S. ROBOTICS may, at its sole discretion, provide a refund to the CUSTOMER not to exceed the latest published U.S. ROBOTICS recommended retail purchase price of the product, less any applicable service fees. All products or parts that are exchanged for replacement will become the property of U.S. ROBOTICS.

1.7 U.S. ROBOTICS warrants any replacement product or part for NINETY (90) DAYS from the date the product or part is shipped to Customer.

1.8 U.S. ROBOTICS makes no warranty or representation that this product will meet CUSTOMER requirements or work in combination with any hardware or software products provided by third parties.

1.9 U.S. ROBOTICS makes no warranty or representation that the operation of the software products provided with this product will be uninterrupted or error free, or that all defects in software products will be corrected.

1.10 U.S. ROBOTICS shall not be responsible for any software or other CUSTOMER data or information contained in or stored on this product.

2.0 CUSTOMER OBLIGATIONS:

2.1 CUSTOMER assumes full responsibility that this product meets CUSTOMER specifications and requirements.

2.2 CUSTOMER is specifically advised to make a backup copy of all software provided with this product.

2.3 CUSTOMER assumes full responsibility to properly install and configure this product and to ensure proper installation, configuration, operation and compatibility with the operating environment in which this product is to function.

2.4 CUSTOMER must furnish U.S. ROBOTICS a dated Proof of Purchase (copy of original purchase receipt from U.S. ROBOTICS or its authorised reseller) for any warranty claims to be authorised.

3.0 OBTAINING WARRANTY SERVICE:

3.1 CUSTOMER must contact U.S. ROBOTICS Technical Support or an authorised U.S. ROBOTICS Service Centre within the applicable warranty period to obtain warranty service authorisation.

3.2 Customer must provide Product Model Number, Product Serial Number and dated Proof of Purchase (copy of original purchase receipt from U.S. ROBOTICS or its authorised reseller) to obtain warranty service authorisation.

3.3 For information on how to contact U.S. ROBOTICS Technical Support or an authorised U.S. ROBOTICS Service Centre, please see the U.S. ROBOTICS corporate Web site at: www.usr.com

3.4 CUSTOMER should have the following information / items readily available when contacting U.S. ROBOTICS Technical Support:

- Product Model Number
- Product Serial Number
- Dated Proof of Purchase
- CUSTOMER contact name & telephone number
- CUSTOMER Computer Operating System version
- U.S. ROBOTICS Installation CD-ROM
- U.S. ROBOTICS Installation Guide

4.0 WARRANTY REPLACEMENT:

4.1 In the event U.S. ROBOTICS Technical Support or its authorised U.S. ROBOTICS Service Centre determines the product or part has a malfunction or failure attributable directly to faulty workmanship and/or materials; and the product is within the TWO (2) YEAR warranty term; and the CUSTOMER will include a copy of the dated Proof of Purchase (original purchase receipt from U.S. ROBOTICS or its authorised reseller) with the product or part with the returned product or part, then U.S. ROBOTICS will issue CUSTOMER a Return Material Authorisation (RMA) and instructions for the return of the product to the authorised U.S. ROBOTICS Drop Zone.

4.2 Any product or part returned to U.S. ROBOTICS without an RMA issued by U.S. ROBOTICS or its authorised U.S. ROBOTICS Service Centre will be returned.

4.3 CUSTOMER agrees to pay shipping charges to return the product or part to the authorised U.S. ROBOTICS Return Centre; to insure the product or assume the risk of loss or damage which may occur in transit; and to use a shipping container equivalent to the original packaging.

4.4 Responsibility for loss or damage does not transfer to U.S. ROBOTICS until the returned product or part is

received as an authorised return at an authorised U.S. ROBOTICS Return Centre.

4.5 Authorised CUSTOMER returns will be unpacked, visually inspected, and matched to the Product Model Number and Product Serial Number for which the RMA was authorised. The enclosed Proof of Purchase will be inspected for date of purchase and place of purchase. U.S. ROBOTICS may deny warranty service if visual inspection of the returned product or part does not match the CUSTOMER supplied information for which the RMA was issued.

4.6 Once a CUSTOMER return has been unpacked, visually inspected, and tested U.S. ROBOTICS will, at its sole discretion, repair or replace, using new or reconditioned product or parts, to whatever extent it deems necessary to restore the product or part to operating condition.

4.7 U.S. ROBOTICS will make reasonable effort to ship repaired or replaced product or part to CUSTOMER, at U.S. ROBOTICS expense, not later than TWENTY ONE (21) DAYS after U.S. ROBOTICS receives the authorised CUSTOMER return at an authorised U.S. ROBOTICS Return Centre.

4.8 U.S. ROBOTICS shall not be liable for any damages caused by delay in delivering or furnishing repaired or replaced product or part.

5.0 LIMITATIONS:

5.1 THIRD-PARTY SOFTWARE: This U.S. ROBOTICS product may include or be bundled with third-party software, the use of which is governed by separate end-user license agreements provided by third-party software vendors. This U.S. ROBOTICS Limited Warranty does not apply to such third-party software. For the applicable warranty refer to the end-user license agreement governing the use of such software.

5.2 DAMAGE DUE TO MISUSE, NEGLIGENCE, NON-COMPLIANCE, IMPROPER INSTALLATION, AND/OR ENVIRONMENTAL FACTORS: To the extent permitted by applicable law, this U.S. ROBOTICS Limited Warranty does not apply to normal wear and tear; damage or loss of data due to interoperability with current and/or future versions of operating system or other current and/or future software and hardware; alterations (by persons other than U.S. ROBOTICS or authorised U.S. ROBOTICS Service Centres); damage caused by operator error or non-compliance with instructions as set out in the user documentation or other accompanying documentation; damage caused by acts of nature such as lightning, storms, floods, fires, and earthquakes, etc. Products evidencing the product serial number has been tampered with or removed; misuse, neglect, and improper handling; damage caused by undue physical, temperature, or electrical stress; counterfeit products; damage or loss of data caused by a computer virus, worm, Trojan horse, or memory content corruption; failures of the product which result from accident, abuse, misuse (including but not limited to improper installation, connection to incorrect voltages, and power points); failures caused by products not supplied by U.S. ROBOTICS; damage caused by moisture, corrosive environments, high voltage surges, shipping, abnormal working conditions; or the use of the product outside the borders of the country or territory intended for use (As indicated by the Product Model Number and any local telecommunication approval stickers affixed to the product).

5.3 TO THE FULL EXTENT ALLOWED BY LAW, THE FOREGOING WARRANTIES AND REMEDIES ARE EXCLUSIVE AND ARE IN LIEU OF ALL OTHER WARRANTIES, TERMS, OR CONDITIONS, EXPRESS OR IMPLIED, EITHER IN FACT OR BY OPERATION OF LAW, STATUTORY OR OTHERWISE, INCLUDING WARRANTIES, TERMS, OR CONDITIONS OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, SATISFACTORY QUALITY, CORRESPONDENCE WITH DESCRIPTION, AND NON-INFRINGEMENT, ALL OF WHICH ARE EXPRESSLY DISCLAIMED. U.S. ROBOTICS NEITHER ASSUMES NOR AUTHORISES ANY OTHER PERSON TO ASSUME FOR IT ANY OTHER LIABILITY IN CONNECTION WITH THE SALE, INSTALLATION, MAINTENANCE, WARRANTY, OR USE OF ITS PRODUCTS.

5.4 LIMITATION OF LIABILITY. TO THE FULL EXTENT ALLOWED BY LAW, U.S. ROBOTICS ALSO EXCLUDES FOR ITSELF AND ITS SUPPLIERS ANY LIABILITY, WHETHER BASED IN CONTRACT OR TORT

(INCLUDING NEGLIGENCE), FOR INCIDENTAL, CONSEQUENTIAL, INDIRECT, SPECIAL, OR PUNITIVE DAMAGES OF ANY KIND, OR FOR LOSS OF REVENUE OR PROFITS, LOSS OF BUSINESS, LOSS OF INFORMATION OR DATA, OR OTHER FINANCIAL LOSS ARISING OUT OF OR IN CONNECTION WITH THE SALE, INSTALLATION, MAINTENANCE, USE, PERFORMANCE, FAILURE, OR INTERRUPTION OF ITS PRODUCTS, EVEN IF U.S. ROBOTICS OR ITS AUTHORISED RESELLER HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES, AND LIMITS ITS LIABILITY TO REPAIR, REPLACEMENT, OR REFUND OF THE PURCHASE PRICE PAID, AT U.S. ROBOTICS OPTION. THIS DISCLAIMER OF LIABILITY FOR DAMAGES WILL NOT BE AFFECTED IF ANY REMEDY PROVIDED HEREIN SHALL FAIL OF ITS ESSENTIAL PURPOSE.

6.0 DISCLAIMER:

Some countries, states, territories or provinces do not allow the exclusion or limitation of implied warranties or the limitation of incidental or consequential damages for certain products supplied to consumers, or the limitation of liability for personal injury, so the above limitations and exclusions may be limited in their application to CUSTOMER. When the implied warranties are not allowed by law to be excluded in their entirety, they will be limited to the TWO (2) YEAR duration of this written warranty. This warranty gives CUSTOMER specific legal rights, which may vary depending on local law.

7.0 GOVERNING LAW:

This Limited Warranty shall be governed by the laws of the State of Illinois, U.S.A. excluding its conflicts of laws principles and excluding the United Nations Convention on Contracts for the International Sale of Goods.

U.S. Robotics Corporation
935 National Parkway
Schaumburg, IL, 60173
U.S.A.