 


1 What's in the box



 
TransPort WR41

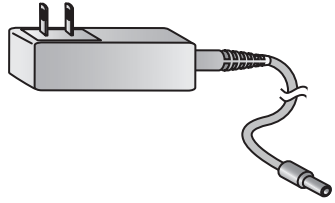

Power Supply
(some models may have a DC power cord or have no power supply)



Power Supply Adapters
(non-US models only)

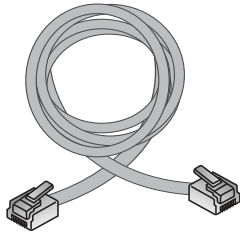

Ethernet Cable



Quick Start Guide

TransPort WR41

 


90001453-88 A


If any item is missing or damaged, please contact your supplier. Note any damage that may have occurred during shipping and report it to the supplier.

Optional equipment


Depending on model and configuration options, the box contains additional cables/antennas as appropriate.

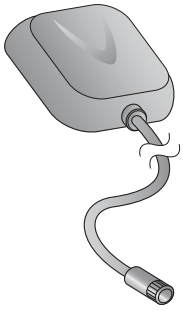

GPS Antenna
(GPS models only)

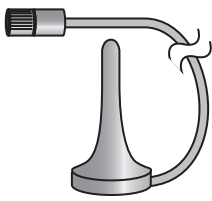 


Wi-Fi Antenna(s)
(Wi-Fi models only)

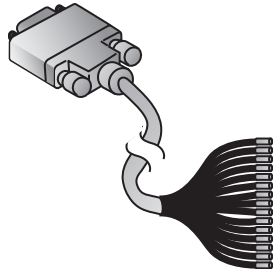 


15-Pin Telemetry Cable
(Fleet models only)



 Telemetry Connector
(Telemetry models only)

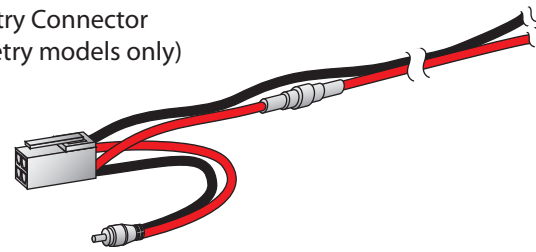


Fleet Power Cord (Fleet models only)

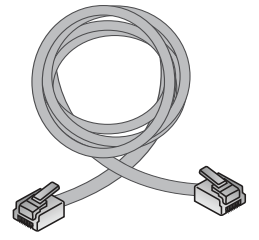 

PSTN Cable
(PSTN and DialServ models only)

 Required additional equipment

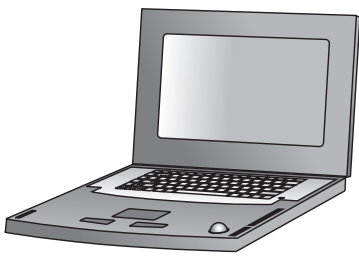

A personal computer

2 Connect the hardware

 
 
- Wi-Fi models only:** Connect the Wi-Fi antennas to the **WIFI PRIMARY** and **WIFI SECONDARY** antenna connectors.
- Connect one end of the Ethernet cable to the **LAN 0** port on the unit and the other end to a LAN port on a PC.
- Connect the power supply. Depending on model, the unit will either come with an AC power supply, locking barrel DC power cord, or a Fleet power cord.

AC Power Supply: Connect the locking barrel end of the power supply to the **MAIN** connector on the unit, and plug the other end into a wall outlet. International units come with interchangeable power supply adapters which can be used according to regional needs.

DC Power Cord: Connect the locking barrel or the 4-pin connector of the cord to the main power port on the unit, and wire the four bare wires according to your needs. The red and black wires provide basic DC power input, and the blue and green wires are programmable signal lines.

Fleet Power Cord: Connect the 4-pin connector to the **AUX** port on the unit. Connect the locking barrel jack to the **MAIN** connector on the unit. Finally, wire the two bare wires according to your needs.


For sample wiring diagrams and pinout information, see the *Fleet I/O Interface User's Guides*, online at <http://ftp1.digi.com/support/documentation/transport/technicalnotes.htm>.

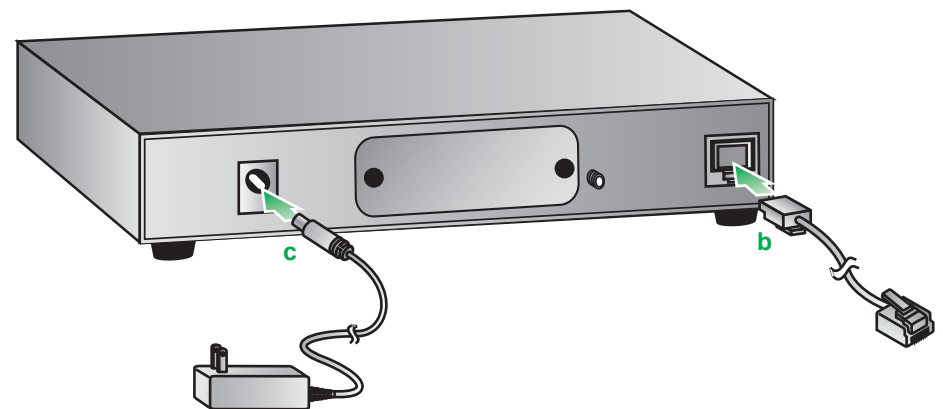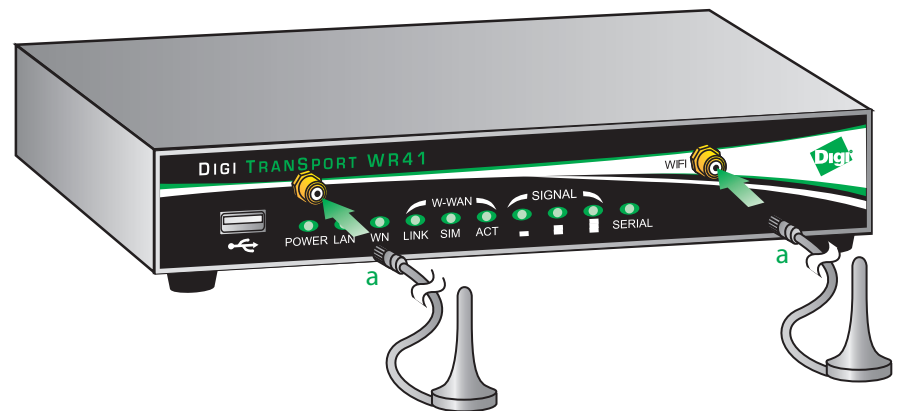


Mounting Tips: Position the Digi TransPort WR41 on a flat, level surface or via wall-mount, rackmount, or DIN rail mounting brackets in a location with adequate ventilation. The unit is designed for indoor use. Do not expose the unit to extremes of heat or cold, strong magnetic fields, or liquids.

3 Run the Getting Started Wizard

 - a If your PC is configured to automatically get an IP address, it can get an IP address from the TransPort WR41. Otherwise, make sure your PC can connect to the network **192.168.1.0 (255.255.255.0)**.
- b Enter **192.168.1.1** into the address bar of the web browser.
- c The first page of the Getting Started Wizard is displayed. This wizard guides you through initial configuration for your TransPort device.
Note: The default username and password to log in to the TransPort device are **username** and **password**.
- To run the wizard, click **Get Started**.
- To manually configure the TransPort device, click **Skip Wizard**.

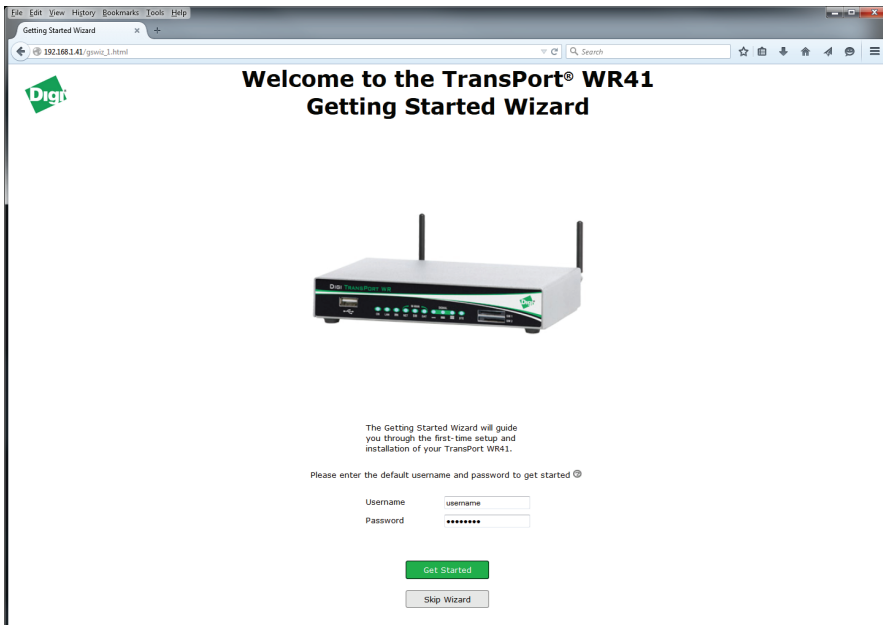

 4 View the TransPort LEDs and startup states

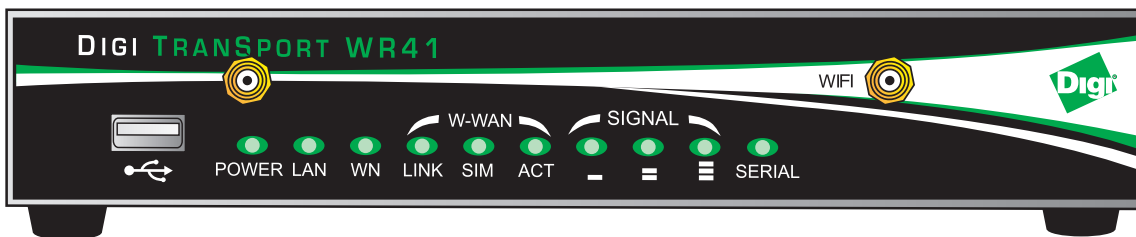

- **POWER LED:**
Off: No power.
Green: TransPort device is powered.
- **LAN LED:** Illuminates steady when there is a network connection to the LAN port and flashes when data is transmitted or received.
- **WN (Wireless Network) LED:**
Wi-Fi models: Illuminates steady if Wi-Fi activity is present.
- **LINK LED:** Not operational.
- **ACT LED:** Not operational.
- **SIGNAL LEDs:** Not operational.
- **SERIAL LED:** Illuminates steady if a terminal is connected to the **SERIAL** port and the DTR signal is on. Flashes when data is transmitted or received.

5 Next Steps

After the Getting Started Wizard completes, the TransPort web interface is displayed. For additional configuration, use the web interface and refer to the *Digi TransPort Users Guide* and *Application Notes* provided on the TransPort Documentation page on the Digi website (www.digi.com/support).