



Connectware™

# Quick Start Guide Digi One™ IA



## 3 Insert CD

Insert CD to configure the unit.

If CD does not start automatically, double-click **My Computer** > **CD-ROM drive**.

## 4 Set Up Device Server

## 5 Follow Wizard

## Congratulations!

You have completed the wizard and your device server is now configured.


If you want more information,

- Go to the User's Guide on the CD under Documentation or
- Open your browser and enter your IP address in the URL to log on to your device server. Default username is **root** and password is **dbps**.

From the web interface you can check your settings or make any changes specific to your environment.

© 2003 Digi International Inc. All rights reserved. The Digi logo, the Digi Connectware logo, and Digi One are trademarks or registered trademarks of Digi International, Inc. in the United States and other countries worldwide. All other trademarks are the property of their respective owners.

## 1 What's in the Box

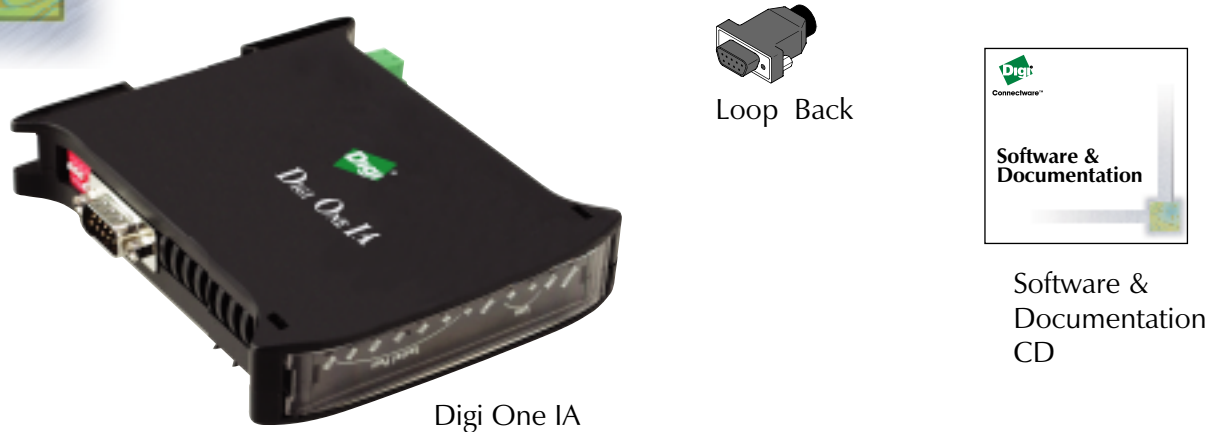

## 2 Install Hardware


### Power Requirements

Input Voltage	Input Current
9 VDC	.414 A
12 VDC	.268 A
24 VDC	.135 A




If switch 4 is up, termination if down, no termination.

Set serial DIP switch according to your serial device requirements (EIA-232/422/485). Use the label on the device server for pin outs.

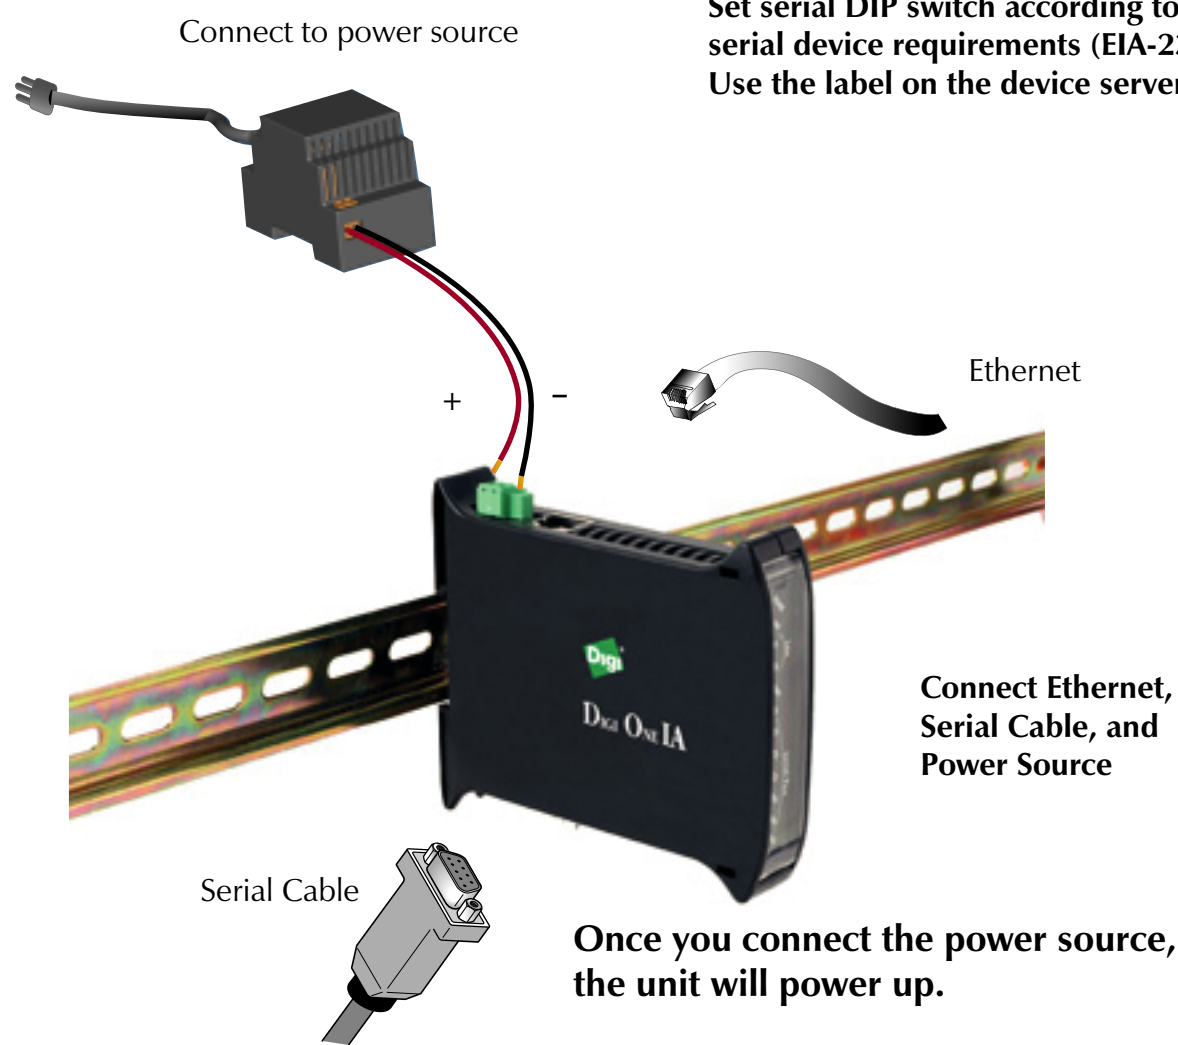

Once you connect the power source, the unit will power up.

When properly connected and powered up, several green and red lights will flash indicating the boot. After a successful boot, the green power light remains on and the red DIAG will flash intermittently until the IP address is assigned.

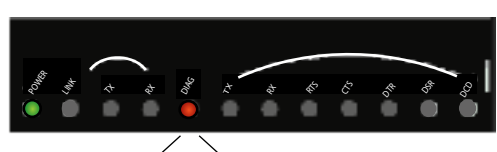

Visit us at [www.digi.com](http://www.digi.com)



PN:(1P)9000265B1